

TARGATT™ HEK293 Knock-in KIT (H11) for Library Screening (Drug Selection)

The TARGATT™ HEK293 Kit (H11) for Antibody Library Screening (Drug Selection) was designed for fast and site-specific knock-in in HEK293 cells, using an easy-to-use gene knock-in approach. The master cell line provided in this kit contains an attP integrase-recognition landing pad engineered into the human H11 (hH11) safe harbor locus in the genome. The kit also contains a cloning plasmid containing a corresponding attB sequence into which any gene of interest can be cloned (under control of the CMV promoter or a promoter-of-choice). The expression of the integrase (provided as a plasmid) mediates the stable integration of the transgene into the master cell line (Figure 1). The TARGATT™ integrase technology enables highly efficient (>40% without enrichment and ~90% with enrichment), and site-specific DNA integration without disruption of internal genes. The TARGATT™ HEK293 Kit (H11) for Antibody Library Screening (Drug Selection) is ideal for single transgene gene knock-in and uniform, stable expression of your protein.

Advantages of using TARGATT™ Master Cell Lines for gene knock-in:

- High efficiency integration
- Site-specific, stable knock-in cell line generation
- Single copy gene integration into safe harbor locus
- Gene expression from an active, intergenic locus
- Low off-target integration

TARGATT™ HEK293 Kit (H11) for Antibody Library Screening (Drug Selection) includes the TARGATT™ 40 attB-Blas-P2A-LacZ (library) Cloning Plasmid (AST3080) which contains blasticidinR. This kit is ideal for drug selection and is suitable for research applications involving gene library construction.

*TARGATT™ master cell lines can be generated in any cell line including stem cells. Please contact Applied StemCell for TARGATT™ cell line engineering services to generate a master cell line in a specific cell line-of-choice or to build your cell libraries.

*The TARGATT™ HEK293 Kit (H11) for Antibody Library Screening (FACS) is also available. The plasmid cloning in this kit contains mCherry and is ideal for fluorescence-activated cell sorting (FACS).

Catalog #	Product	Size
AST-1306	TARGATT HEK293 Knock-in Kit (H11) for Library Screening (Drug Selection)	1 kit

Intended Use

This product is for research use only and not intended for human or animal diagnostic or therapeutic uses.

Quality Assurance

A certificate of analysis (COA) with detailed quality control information for the cell line and components of the kit will be provided with each shipment.

Storage Instructions and Stability

Store the TARGATT™ master cell line in liquid nitrogen freezer immediately upon receipt. Store the plasmids at -20°C. Do not freeze-thaw plasmids repeatedly. The products provided in this kit are stable for at least 6 months from the date of receiving when stored as directed.

Precautions

PLEASE READ BEFORE HANDLING ANY FROZEN VIALS. Please wear appropriate Personal Protection Equipment (lab coat, thermal gloves, safety goggles and a face shield) when handling frozen vials. Please be aware that the following scenario can occur: Liquid nitrogen can leak into the vials when the vials are submerged in liquid nitrogen. Upon thawing, the liquid nitrogen returns to the gas phase, resulting in a dangerous build-up of pressure within the vial. This can result in the vial exploding and expelling not only the vial contents but also the vial cap and plastic fragments of the vial.

Directions for Use

Kit Components

Catalog #	Component	Amount
AST-1305-1	TARGATT™ HEK293 Master Cell Line	1 x 10 ⁶ cells
AST-3080	TARGATT™ 40 attB-Blas-P2A-LacZ (library) Cloning Plasmid [#]	15 µg
AST-3065	TARGATT™ 25 mCherry-attB (No Promoter); Positive Control Plasmid ^{#†}	15 µg
AST-3201	TARGATT™ CMV-integrase Plasmid ^{#†}	15 µg

[#] Aliquot into single-use quantities and store at -20°C; do not freeze-thaw the plasmid repeatedly. [†] The positive control and integrase plasmids are proprietary materials and should not be amplified. The provided quantity is sufficient for 27 transfections. Additional quantities of these plasmids are available for purchase.

1. Preparation of culture medium

1.1 Example preparation of HEK293 medium (complete growth medium)

- 1000 mL DMEM High Glucose, (-) Glutamine, (-) Pyruvate
- 50 ml FBS
- 11 mL 100x GlutaMAX
- 11 mL 100mM Pyruvate
- 27.4 mL 1M HEPES

Notes:

- The medium should be kept at 4°C. Only aliquots that will be used up that day are warmed up to room temperature or 37°C.
- Pen/Strep (Gibco™ 15140) is diluted 200x into the aliquot that will be used. It is **not** added to the stock medium.
- Pen/Strep aliquots must be stored at -20°C in a non-cycling freezer (i.e. freezers that build-up ice). Aliquots are only thawed once.

1.2 Freezing medium

- 90% HEK293 medium

- 10% DMSO

2. Thawing and culturing cryopreserved cells

To ensure the highest level of viability, thaw the vial and initiate the culture as soon as possible upon receipt. If upon arrival, continued storage of the frozen culture is necessary, it should be stored in liquid nitrogen vapor phase and not at -70°C. Storage at -70°C will result in loss of viability.

- 2.1. Thaw the vial containing HEK293 cells by gentle agitation in a 37°C water bath. To reduce the possibility of contamination, keep the O-ring and cap out of the water. Thawing should be rapid (approximately 2 minutes).
- 2.2. Remove the vial from the water bath as soon as the contents are thawed and decontaminate by dipping in or spraying with 70% ethanol.

Note: All the operations from this point on should be carried out under strict aseptic conditions.

- 2.3. Transfer the contents of the vial equally into 2 wells of a 6-well plate (1/2 vial in each well; 2-fold dilution).
- 2.4. Add “enriched” complete growth medium (complete growth medium in step 1.1 but with 9% FBS) while moving the plate in a figure-8 pattern several times.
- 2.5. Incubate the culture in a suitable incubator at 37°C in 5% CO₂ for 24 hours.
- 2.6. After 24 hours, change media to complete growth medium (step 1.1).
- 2.7. Incubate the culture at 37°C in 5% CO₂.

3. Sub-culturing procedure (maintenance)

Volumes are given for a 10 cm² well in a multi-well plate (6-well plate). Corning® CellBIND® 6-well Clear Multiple Well Plates or poly-lysine coated plates are highly recommended for subculturing this product. Increase or decrease the amount of dissociation medium needed proportionally for culture vessels of other sizes.

- 3.1. Remove and discard the spent culture medium
- 3.2. Add 750 µL of 4-fold diluted 0.25% Trypsin-EDTA (T/4) solution (diluted with DPBS) to one well and observe cells under an inverted microscope until the cell layer is dispersed (usually 3-5 minutes).

Note: To avoid clumping do not agitate the cells by hitting or shaking the plate while waiting for the cells to detach. Cells that are difficult to detach may be placed at 37°C to facilitate dispersal.

- 3.3. Add 750 µL of complete growth medium and swirl to mix. Then break-up the cell clumps by gently pipetting.
- 3.4. Add appropriate aliquots of the cell suspension to new culture vessels.
- 3.5. Incubate cultures in a 37°C/ 5% CO₂ incubator.
- 3.6. Subculture before cell confluency reaches 100%
 - Subcultivation ratio: 1:6 to 1:20 weekly, depending on timing of expected usage
 - Medium renewal: Every 2 to 3 days

4. Cryopreserving cells

We recommend cryopreserving the cells from a 70-90% confluent well of a 6-well plate (i.e. 10 cm² growth area) in 1 mL of freezing medium per cryogenic vial.

- 4.1. Remove the medium (supernatant) from culture well or flask.

- 4.2. Add adequate amount of freezing media to cells (1 mL for 10 cm² growth area) and detach the cells by pipetting.
- 4.3. Transfer approximately 1 to 1.5 mL of the cell suspension to a labeled cryogenic vial.
- 4.4. Move the vial(s) to a Corning® CoolCell® Freezing System for cryogenic vials and move the CoolCell® holder to a -80°C freezer.

Note: Try to place the vials symmetrically in CoolCell® holder to facilitate even freezing across all vials

- 4.5. After one day, move the cryogenic vials to liquid nitrogen storage

Note: Place the cryogenic vials on dry-ice while transferring from -80°C freezer to the liquid nitrogen tank.

5. Transfection procedure

5.1 Cloning with TARGATT™ 40 attB-Blas-P2A-LacZ (library) Cloning Plasmid

- 5.1.1 Clone the gene of interest into the TARGATT™ 40 attB-Blas-P2A-LacZ (library) Cloning Plasmid to make the donor plasmid using the NEB® Golden Gate Assembly Kit (Bsal-HF®v2).
- 5.1.2 Amplify the plasmids using E. cloni® 10G SUPREME SOLOs electrocompetent cells.
Note 1: See the E. cloni® 10G and 10GF' Electrocompetent Cells manual for the transformation protocol.
Note 2: Do not use 5-alpha competent cells to transform the plasmids.
- 5.1.3 Purify plasmid pool, aliquot into single-use quantity, and store at -20°C. Do not freeze-thaw the plasmid repeatedly.

5.2 Seeding for transfection the next day in a 24-well plate

- 5.2.1 Warm up the following reagents at room temperature:
 - Aliquot of HEK293 medium without Pen/Strep
 - Pen/Strep
 - Trypsin (T/4) = 0.25% trypsin 4-fold diluted with DPBS
 - DPBS (for resuspending cells after centrifugation)
- 5.2.2 Aspirate the medium (supernatant) from the culture vessel.
- 5.2.3 Immediately add 750 µL T/4 solution per well of a 6-well plate.
- 5.2.4 Allow the trypsinization to work for ~2-5 minutes.
- 5.2.5 Add 750 µL complete growth medium and swirl to mix. Then break-up the cell clumps by pipetting.
- 5.2.6 Transfer the entire content of the well to a labeled 1.5 mL centrifuge tube.
- 5.2.7 Centrifuge at 200 x g for 5 minutes.
- 5.2.8 Aspirate most of the supernatant, leaving a little liquid at bottom. Using a pipette remove rest of supernatant with pipette without disturbing cell pellet.
- 5.2.9 Resuspend the cell pellet in 1 mL DPBS and mix by pipetting a couple of times.
Note: At this point, combine resuspended cells from multiple wells if necessary, in a 15 mL tube for counting.
- 5.2.10 Count cells using trypan blue and an automated cell counter.
- 5.2.11 Seed the cells in no-antibiotic growth medium such that their concentration will be 0.35 x 10⁶ cells/mL.
- 5.2.12 Pipet 0.5 mL of the cell solution into each desired well of the 24-well plate (i.e., 175,000 live cells per 2 cm² well).
- 5.2.13 Distribute the cells evenly by quickly moving the plate in a figure-8 pattern several times.
- 5.2.14 Incubate at 37°C in 5% CO₂.

5.3 Transfection using Xfect™ Transfection Reagent

- 5.3.1 Warm up the following reagents at room temperature:

- Xfect™ Transfection Reagent (stored at 4°C)
- Xfect™ Transfection Buffer (stored at 4°C)

5.3.2 Calculate the volume of the Xfect™ transfection reagent, buffer and plasmid volume to be mixed

Note: The Xfect™ to plasmid ratio is 0.3 µL Xfect™ per 1 µg plasmid. However, do not pipet less than 1µL (i.e. always prepare at least a 3.33 µg plasmid mix, even if only transfecting 2 µg, 1 µg, etc).

Table 1. Example transfection mix for transfecting 2 µg GFP plasmid into three wells of a 24-well plate for reagent validation[#]

Reagent	Amount
GFP Plasmid*	6.6 µg**
Xfect™ transfection reagent	1.98 µL
Xfect™ buffer	q.s.
Final volume	109.9 µL

** Any GFP plasmid < 7kb can be used. ** Amount of plasmid DNA to be used is given in µg quantity. Calculate the appropriate volume based on the concentration of the plasmid. # Amount of transfection mix recommended for pipetting 33.3 µL in three wells.*

Note: Quantum satis (q.s.), the volume needed to bring the final solution volume to 109.9 µL

5.3.3 For integrase-mediated integration transfections, we recommend a 3:1 donor:integrase mass ratio (i.e. three-fold more of the donor by mass).

Table 2. Transfection of donor or positive control plasmid AST-3065 (mCherry-attB)[#]

Reagent	Amount
Integrase plasmid	1.65 µg**
Donor or positive control plasmid	4.95 µg**
Xfect™ transfection reagent	1.98 µL
Xfect™ buffer	q.s.
Final volume	109.9 µL

*** Amount of plasmid DNA to be used is given in µg quantity. Calculate the appropriate volume based on the concentration of the plasmid. # Amount of transfection mix recommended for pipetting 33.3 µL in three wells.*

Note: Quantum satis (q.s.), the volume needed to bring the final solution volume to 109.9 µL

- 5.3.4 Label 1.5 mL microcentrifuge tubes
- 5.3.5 If the medium that the cells are in has Pen/Strep, carefully replace it with warm non-Pen/Strep medium.
- 5.3.6 Add calculated amount of Xfect™ buffer and plasmid to the microcentrifuge tube.
- 5.3.7 Vortex or pipet the Xfect™ reagent to fully resuspend it and then transfer the calculated amount of Xfect™ into the plasmid solution.
- 5.3.8 Quickly vortex the transfection solution to mix it well. Allow it to be incubated at room temperature for at least 10 minutes (but no longer than 15 minutes).
- 5.3.9 Transfer the appropriate amount of mix to each well of the culture plate without disturbing the attached cells. (For example, to transfect 2 µg plasmid DNA, pipet 33.3 µL of the transfection mix into each desired well of the 24-well plate).

Note: Give a quick shake immediately after transferring the transfection mix to each well.

- 5.3.10 Incubate at 37°C/ 5% CO₂ for 72 hours. We have observed the highest integration efficiencies ~72 hours after transfection (no medium change is required).
- 5.3.11 After the 72-hour incubation, cells are ready to be enriched (or sorted, if required).
Note: If sorting, please sort the cells into the sorting medium (step 1.3) for robust recovery of cells

5.4 Enrichment using Blasticidin selection

- 5.4.1 Seventy-two (72) hours after transfection, expand the cells 20-fold. (Ex. from one well of a 24-well plate (2 cm²) into four wells of a 6-well plate (40 cm²)). Use trypsin so that clumps are broken up into single cells (to prevent negative cells from being shielded from blasticidin).
- 5.4.2 After 24 hours, replace the growth medium with blasticidin selection medium (growth medium plus 10 ug/mL blasticidin).
- 5.4.3 Maintain selection pressure for 2 weeks, or until the desired level of enrichment is reached (can be monitored by checking for mCherry fluorescence using a microscope).
- 5.4.4 Before the 2 weeks have been reached, the cells should be split 20-fold every time they reach 80-90% confluence.
- 5.4.5 For a 20-fold split using a 6-well plate:
- Remove medium from the well.
 - Add 750 µL of 0.0625% trypsin (4-fold dilution of 0.25%) to the well.
 - Incubate for 2-5 minutes until the cells start to detach.
 - Add 750 µL of growth medium to neutralize the trypsin and break-up the cells by pipetting.
 - Transfer 75 µL of the suspended cells into a new well of a 6-well plate with 2.5 mL blasticidin selection medium.

Data

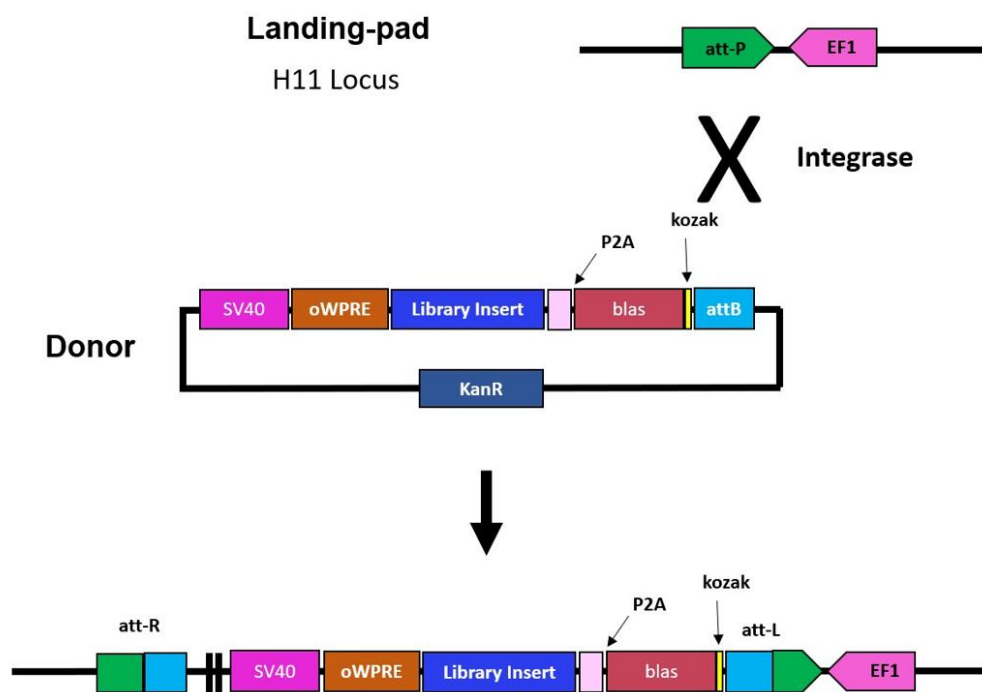


Figure 1. Schematic representation of TARGATT™ site-specific transgene integration mediated by integrase. The TARGATT™ HEK Master Cell Line was engineered with the attP landing pad at the hH11 safe harbor locus. The

TARGATT™ plasmid containing the integrase recognition site, attB is used to clone the transgene. The integrase catalyzes an irreversible reaction between the attP site in the genome and attB site in the donor vector, resulting in integration of the gene of interest at the selected H11 locus. The cells containing the gene of interest can be enriched using the selection marker.

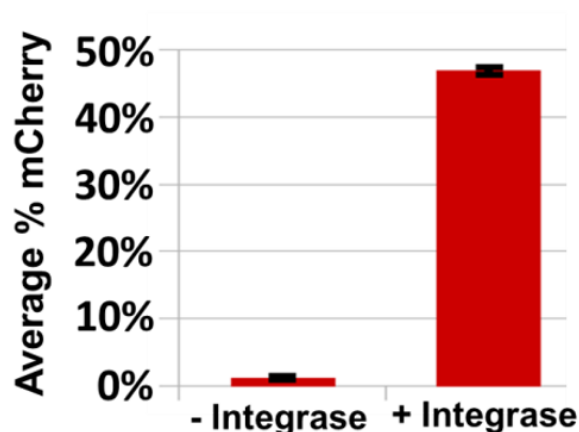


Figure 2. The mCherry integration into the TARGATT™ HEK293 master cell line mediated by the integrase, 72 hours post-transfection. Cells were transfected with the mCherry positive control plasmid and either the provided TARGATT™ integrase plasmid (+Integrase) or a mutant TARGATT™ integrase plasmid deficient for integration (Integrase). The mCherry plasmid has no promoter and requires the ubiquitous EF1 promoter in the landing pad after integration to express the reporter gene. The integration efficiency of mCherry knock-in into landing pad was >40%, without selection. Data represents the mean +/- SE of two representative experiments done in triplicates.

Related Products

Catalog #	Product	Size
AST-1305	TARGATT™ HEK293 Knock-in Kit (H11)	1 kit
AST-1307	TARGATT™ HEK293 Knock-in Kit (H11) for Library Screening (FACS)	1 kit
AST-1308	TARGATT™ HEK293 High-Efficiency Sub-Line (HESL) Knock-in Kit H11 for Library Screening (FACS)	1 kit

Technical Support

CONTACT US

For more information or assistance, contact Customer Service at:

- Email: info@appliedstemcell.com
- Direct line: [\(408\) 773-8007](tel:4087738007)

WEBSITE RESOURCES

Visit appliedstemcell.com for technical resources and information including:

- Safety Data Sheets (SDS)
- Certificates of Analysis (when available)
- FAQs
- Product literature
- Complete contact information

Applied StemCell, Inc.

521 Cottonwood Dr, Suite # 111, Milpitas, California, 95035, USA • Telephone: +1 866.497.4180 • appliedstemcell.com

© 2026 Applied StemCell, Inc. All rights reserved. TARGATT™ and ActiCells™ are trademarks of Applied StemCell, Inc. All other trademarks are the property of their respective owners. PN: IFU-AST-1306 Rev. 1

Effective Date: 15 September 2026